

**ACE RETAIL PRICE**

**Motorization Battery & AC Power**

**Natural Roman Shades, Soft Fabric Roman Shades, Shades of Elegance Roman Shades and Roller Shades and Draperies**

<b>Product</b>	<b>Battery</b>
Solar & Roller Shades	\$365.00
Natural Roman, Fabric Soft Roman and Shades of Elegance Roman Shades	\$465.00

<b>Product</b>	<b>A/C</b>
Solar & Roller, Natural Roman, Fabric Soft Roman, Shades of Elegance Roman Shades	\$495.00
Draperies*	\$1195.00
Averte Natural Fold	\$1195.00

**Control Options (Controllers are wire-free and battery is excluded)**


Single-Channel Remote	\$65.00
Five-Channel Remote	\$90.00
Single-Channel Wall Switch	\$275.00
Five-Channel Wall Switch	\$275.00

**A/C Cord Options (6' Cord is Standard)**

10' or 24' Cord	\$75.00
3' Cord	n/c

\*Price remote separately

## OPERATION: SINGLE/MULTI CHANNEL REMOTE

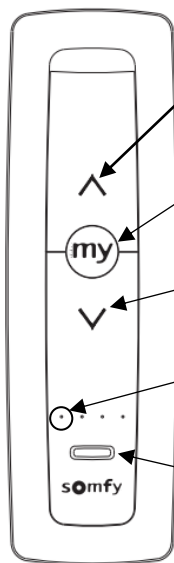

**1. UP BUTTON:** To raise the shade, press the UP button.

**2. MY BUTTON:** To stop the shade from moving, press the MY button


**3. DOWN BUTTON:** To lower the shade. Press the DOWN button.

**4. CHANNEL INDICATOR:** The active channel will illuminate the corresponding light. From left to right, each light corresponds to channels 1-4. All four

lights illuminated indicate the 5<sup>th</sup> channel is active.

**5. CHANNEL BUTTON:** Press to select the desired channel, which will illuminate red in the channel indicator.

**6. PROGRAMMING KEY:** When instructed in the programming guide, insert a paper clip here to save programming or activate programming mode.

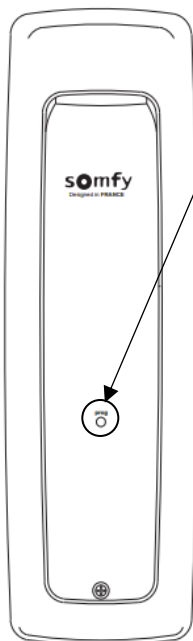

## COPYING CHANNELS

1. Use the **Channel button** to select the channel that will be copied.
2. Hold the **Programming key** on the back of the remote until the shade jogs once.
3. Using the **Channel button**, select the channel to which the shade will be copied.
4. Briefly press the **Programming key** again until the shade jogs once.

## DELETING CHANNELS

1. Use the **Channel button** to select the channel for the shade(s) you want to keep.
2. Hold the **Programming key** on the back of the remote until the shade jogs once.
3. Select the channel the shade will be deleted from.
4. Briefly press the **Programming key** until the shade jogs once.

## ADDING ANOTHER REMOTE

1. Hold the **Programming key** on the back of the ORIGINAL remote until the shade jogs once.
2. On the back of the **NEW** remote, press the **Programming key** until the shade jogs once.
3. On the **NEW** remote, test the control directions to confirm the shade was copied to the remote.

## LIMITED LIFETIME GUARANTEE

**Horizons Window Fashions warrants that its Horizons products – properly installed in a residential dwelling – will be free from defects in materials and workmanship for as long as the original purchaser owns the product.**

All fabric colors tend to lose their original intensity over time and pull cords eventually wear out. This is considered normal wear and tear and is not covered by this guarantee. Abuse and misuse are not covered. Color lots vary and may not exactly match a previously ordered product. Repair is the purchaser's sole remedy under this guarantee.

**This guarantee does not cover incidental or consequential damages, freight, installation, or service calls (trip charges).**

# HORIZONS™

STYLE THAT MAKES A STATEMENT

Programming Instructions for

**Natural Woven Shades, Fabric Roman Shades,  
Shades of Elegance Roman/Roller Shades**

## GETTING STARTED

- **Press the programming button on the motor head or connect the charger to activate the motor. (Motor will not work until activated.)**
- Make sure the motors are fully charged before installation.
- If working on one shade and multiple shades are on the same channel, disconnect or activate sleep mode on any shades not being modified.

## KEY TERMS

**Jog:** Brief up and down movement from the shade.

**Press:** Brief press and release. Should not be held for more than .5 seconds.

**Hold:** Hold the button until you get the desired action/result.

**Solid red light:** Indicates an obstacle.

**Red LED blinking light:** Indicates low battery. Plug in the charger.

**Continuously blinking red LED:** Thermal protection mode. Let motor cool for 15 mins.

**Continuously blinking orange LED:** The motor is in programming mode.

**Green LED blinks once:** When any command is received from the remote.

**Green LED blinks five times:** When programming is saved.

### SWITCH CONTROL DIRECTION

1. Move the shade away from the end limits by pressing the **UP or DOWN** buttons and stop with the **MY** button.
2. Hold the **UP and DOWN** buttons until the shade jogs once.
3. Hold the **MY** button until you get one jog.
4. Press the **UP or DOWN** button and check if the control direction is correct.

### SET "MY" FAVORITE POSITION

1. Move the shade with the **UP or DOWN** button and stop with the **MY** button at the desired Favorite position.
2. Hold the **MY** button until you get one jog.

### DELETE "MY" FAVORITE POSITION

1. Press the **MY** button to move the shade to the current FAV position.
2. Hold the **MY** button until you get one jog to confirm the FAV position was removed.

### INCREASE/DECREASE THE SHADE SPEED

1. Use the **UP or DOWN** button to move the shade away from the end limits. Stop the shade by pressing the **MY** button.
2. Hold the **UP, MY, and DOWN** buttons simultaneously until you get one jog.
  - a. The shade will move to the upper and lower limits continuously.
3. Increase the speed by holding the **UP** button. (The shade will jog to confirm.)
4. Decrease the speed by holding the **DOWN** button. (The shade will jog to confirm.)
5. Confirm the speed by holding the **MY** button until you get one jog from the shade.

### ACTIVATE SLEEP MODE

1. Hold the **Program** button on the motor head until you get one jog.
2. Press the **Program** button on the motor head. The shade will jog twice to confirm sleep mode is activated.

### DEACTIVATE SLEEP MODE

1. Press the **Programming** button on the motor head. You should get one jog from the shade.
2. Or you can wait 15 minutes, and the shade will deactivate sleep mode automatically.

### COMPLETE MOTOR RESET

#### **\*BATTERY POWERED MOTOR SKIP TO STEP 8\***

#### **AC MOTOR ONLY**

1. Start with the motor unplugged.
2. Plug the motor in for 3 seconds.
3. Unplug the motor for 12 seconds.
4. Plug the motor back in. **(The shade may or may not jog.)**
5. Use the **Channel** button to select a channel.
6. Hold the **Programming** key on the back of the remote for 7 seconds. **(The shade may or may not jog.)**
7. Hold the **UP and DOWN** buttons simultaneously until you get one jog.

#### **\*AC MOTOR SKIP TO STEP 11\***

#### **BATTERY POWERED MOTOR ONLY**

8. Hold the **White Button or Pinhole** button on the motor head until you get three jogs from the shade.
9. Using the **Channel** button, select a channel on the remote.
10. Hold the **UP and DOWN** buttons simultaneously until you get one jog from the shade.
11. Test the control directions.
  - a. If the directions are correct, proceed to step 9.
  - b. If incorrect, hold the **MY** button until you get 1 jog.
12. Raise the shade to the upper limit by holding the **UP** button.
13. Press the **MY and DOWN** buttons simultaneously to save the upper limit. (The shade will move down by itself.)
14. Stop the shade at the lower limit by pressing the **MY** button.



V1



V2

### COMPLETE MOTOR RESET CONT.

15. Save the lower limit by simultaneously pressing the **MY and UP** buttons. The shade will move to the upper limit set.
16. Hold the **MY** button until you get one jog from the shade.
17. Briefly press the **Programming** key on the back of the remote.
  - a. If the shade does **not jog** once during this step, the programming will **not save**.

### LIMIT ADJUSTMENTS

#### **Adjusting the limits (Adjust one limit at a time)**

1. Press the **UP or DOWN** button to move the shade to the preset limit that will be adjusted. (Upper/Lower)
2. Hold the **UP and DOWN** buttons until the shade jogs once.
3. Using the **UP or DOWN** button, adjust the shade to the new limit. Once you've adjusted to the new limit, hold the **MY** button until the shade jogs once.

### TROUBLESHOOTING GUIDE

#### **\*The shade does not raise or lower\***

- Check that all cables are plugged in correctly.
- Check that the remote has power by looking for the channel light to flash when a button is pressed. If no light shows up, change the batteries in the remote. If the problem continues, contact your dealer.
- If using a multichannel remote, check other channels and ensure shade was programmed correctly.

#### **\*Shade operates on the wrong channel\***

- Reprogram any incorrect shades using the "**COPY/DELETE CHANNELS**" section.

#### **\*Shade does not stop in the correct position\***

- Upper or lower limit is not correct, see "**LIMIT ADJUSTMENTS**" section.