

# Sliding Panels Installation Instructions

## Installing The Track

Please Follow These Installation Instructions

### 1 Preparing to install the Sliding Panels track

After removing the panel track from its packaging, ensure you have all the parts needed for the installation. Do not dispose of the packaging until installation is complete. As with most installations of this type, a secure attachment to the mounting surface is required. All bracket-mounting screws must screw into wood. If your particular install requires you mount the brackets to a surface other than wood, be sure to use appropriate fasteners.






### 2 Bracket attachment

**Inside mount:** The swivel brackets must be located 4" in from the ends of the track. You must have a minimum of 2 1/4" of space from the center of the hole in the bracket and the window (or window hardware) for all channel tracks. This minimum distance will ensure the panels will have enough room to open and close. Attach the swivel brackets with the screws provided insuring the brackets are in line.

**NOTE:** If installing a valance inside the window you must attach the valance to the headrail before attaching to the brackets otherwise, once the headrail is installed you will be unable to attach the valance (Figure 1 & 2)

**Outside mount:** Locate the position of the headrail over the window. Mark the location of the ends of the headrail on the wall. Attach the extension brackets to the wall 4" in from the ends of the headrail. Make sure the brackets are level with each other. If the panel track requires more than two brackets, locate the extra brackets level and evenly spaced between the two end brackets. If using the small nuts and bolts provided, attach the swivel brackets to the extension brackets.

**NOTE:** When a three track headrail is used with a Roller Shade valance (Figure 3), the valance will come with slots to accommodate the swivel brackets. The swivel brackets must be located so they are aligned with these slots, if you need to position the bracket in another place, you can notch the valance with a scissor (Figure 3)

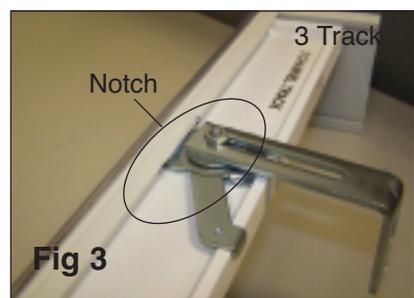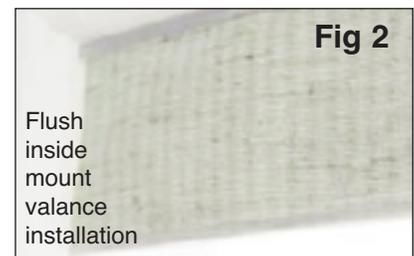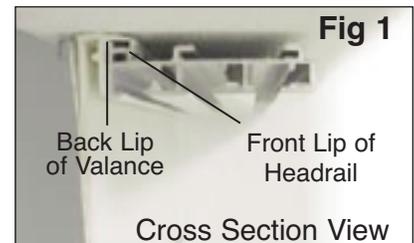

# Sliding Panels Installation Instructions

## 3 Installing the headrail




Rotate the swivel brackets to the open position (Figure 5). Raise headrail to brackets, you may have to adjust the swivels to receive the track. Once headrail is in position, rotate the swivel brackets to the closed position. (Figures 4, 5 & 6)

**NOTE: If your headrail has more than two brackets, start as close to the center as possible which will make installation much easier.**



## 4 Attaching the panels

Pull forward on the bottom of the front panel carrier and pushing back on the bottom of the back panel carrier; slide the back carrier from behind the front carrier (Figure 7). Repeat this action for the number of panels on your headrail. Align the velcro strip at the top of the panel with the velcro strip on the front face of the panel carrier. Beginning at one end press the velcro strips together across the panel carrier. Be sure to go back and press the velcro to ensure a secure attachment (Figure 8 & 9). Repeat this step until all panels are attached. After all panels have been installed, return the carriers to their original positions (Figure 10). Once finished the panels should all overlap as in Figure 11.

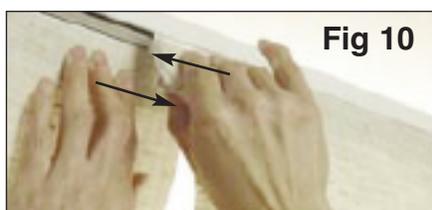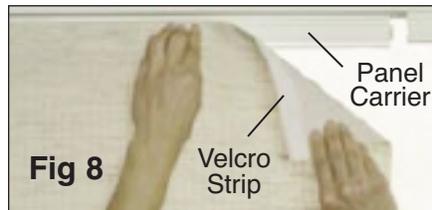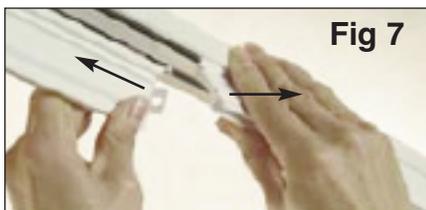

# Sliding Panels Installation Instructions



## Installing The Valance

### 5 Valance assembly

**Fabric Valance:** Attach the clear corner caps to the valance return joiners (Figure 12), attach the valance returns to the joiners (Figure 13). Attach the valance returns to the valance face. Insert the valance fabric across valance face, around the corner joiners to the end of the returns (Figure 14). Trim off any excess fabric.

**Natural Woven Valance:** Attach the natural woven valance onto the track (figures 14, 15 & 16). The Track has Dual Lock and the Valance has Velcro (loop side). Press firmly.



NOTE: Returns on valance are only required on outside mount installations.

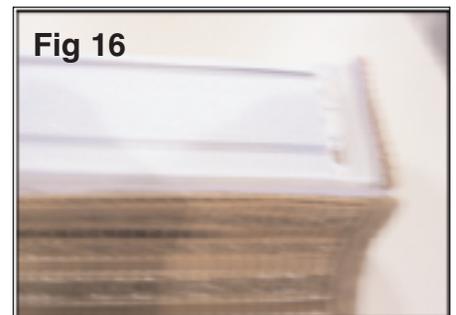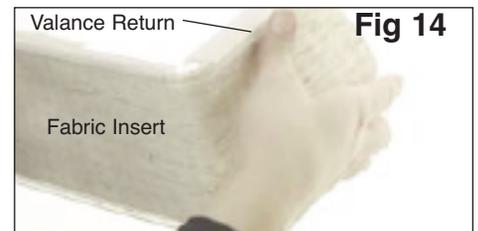

### 6 Attaching a Fabric Valance to headrail

Be sure the valance is centered on the headrail prior to installation. Rotate valance so the back lip slips into the front lip of the headrail (Figure 1), rotate forward until the valance snaps into the headrail.

NOTE: For inside mount applications you must attach the valance to the headrail before installing on the brackets otherwise, once the headrail is installed you will be unable to attach the valance.

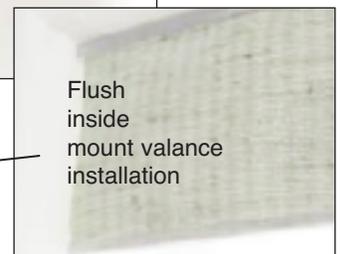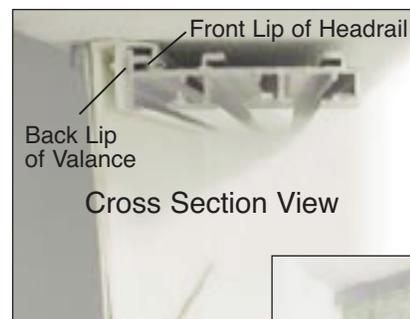

# Sliding Panels Installation Instructions

## Installing The Cord Tension Pulley

### 7 Installing the cord tension pulley

You can mount the cord tension pulley to the wall for outside mounts, or to the window sill for inside mounts. Once you have decided on the location, make sure the cord has enough tension while still moving freely through the pulley and install with screws provided.

